


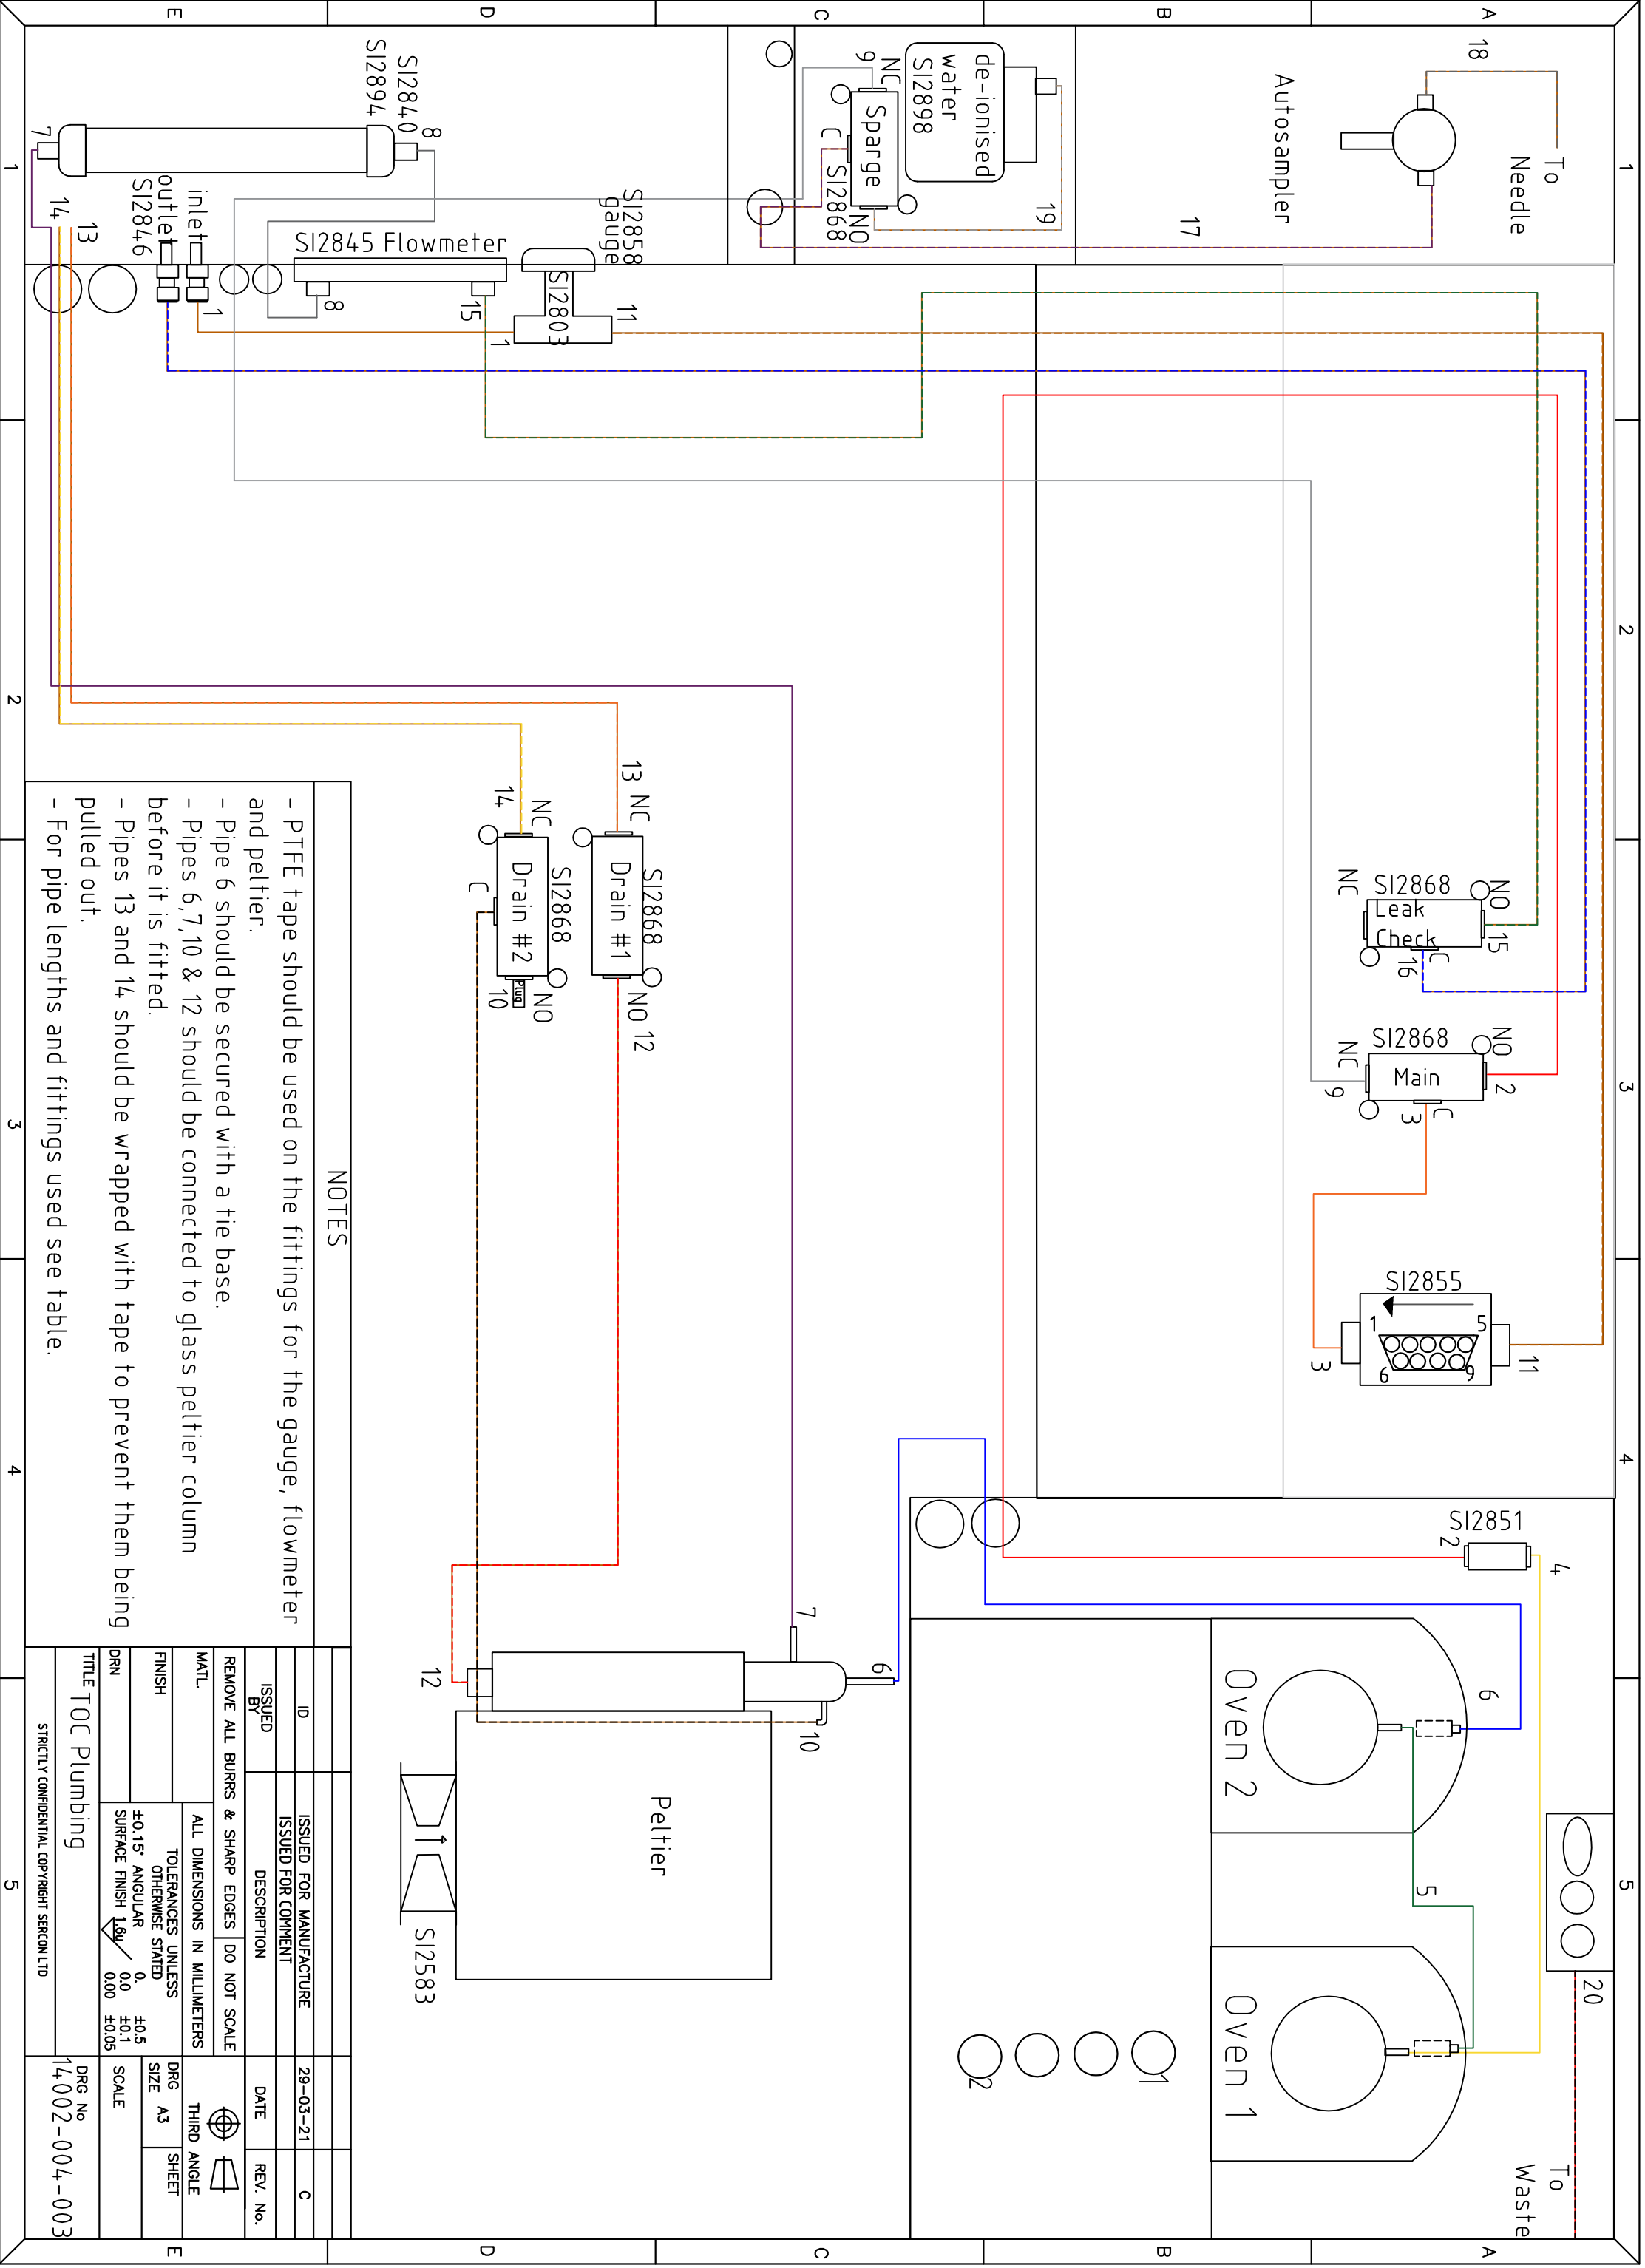

NOTES									
- PTFE tape should be used on the fittings for the gauge, flowmeter and peltier.									
- Pipe 6 should be secured with a tie base.									
- Pipes 6,7,10 & 12 should be connected to glass peltier column before it is fitted.									
- Pipes 13 and 14 should be wrapped with tape to prevent them being pulled out.									
- For pipe lengths and fittings used see table.									

ID		ISSUED FOR MANUFACTURE		29-03-21		C	
ISSUED BY		DESCRIPTION		DATE		REV. No.	
REMOVE ALL BURRS & SHARP EDGES		DO NOT SCALE				THIRD ANGLE	
MATL.		ALL DIMENSIONS IN MILLIMETERS		DRG A3		SHEET	
FINISH		TOLERANCES UNLESS OTHERWISE STATED		SCALE			
DRN		±0.15° ANGULAR SURFACE FINISH 1.6µ		0.0 ±0.1 ±0.05			
TITLE TOC Plumbing							
STRICTLY CONFIDENTIAL COPYRIGHT SERCON LTD							
DRG No 14-002-004-003							