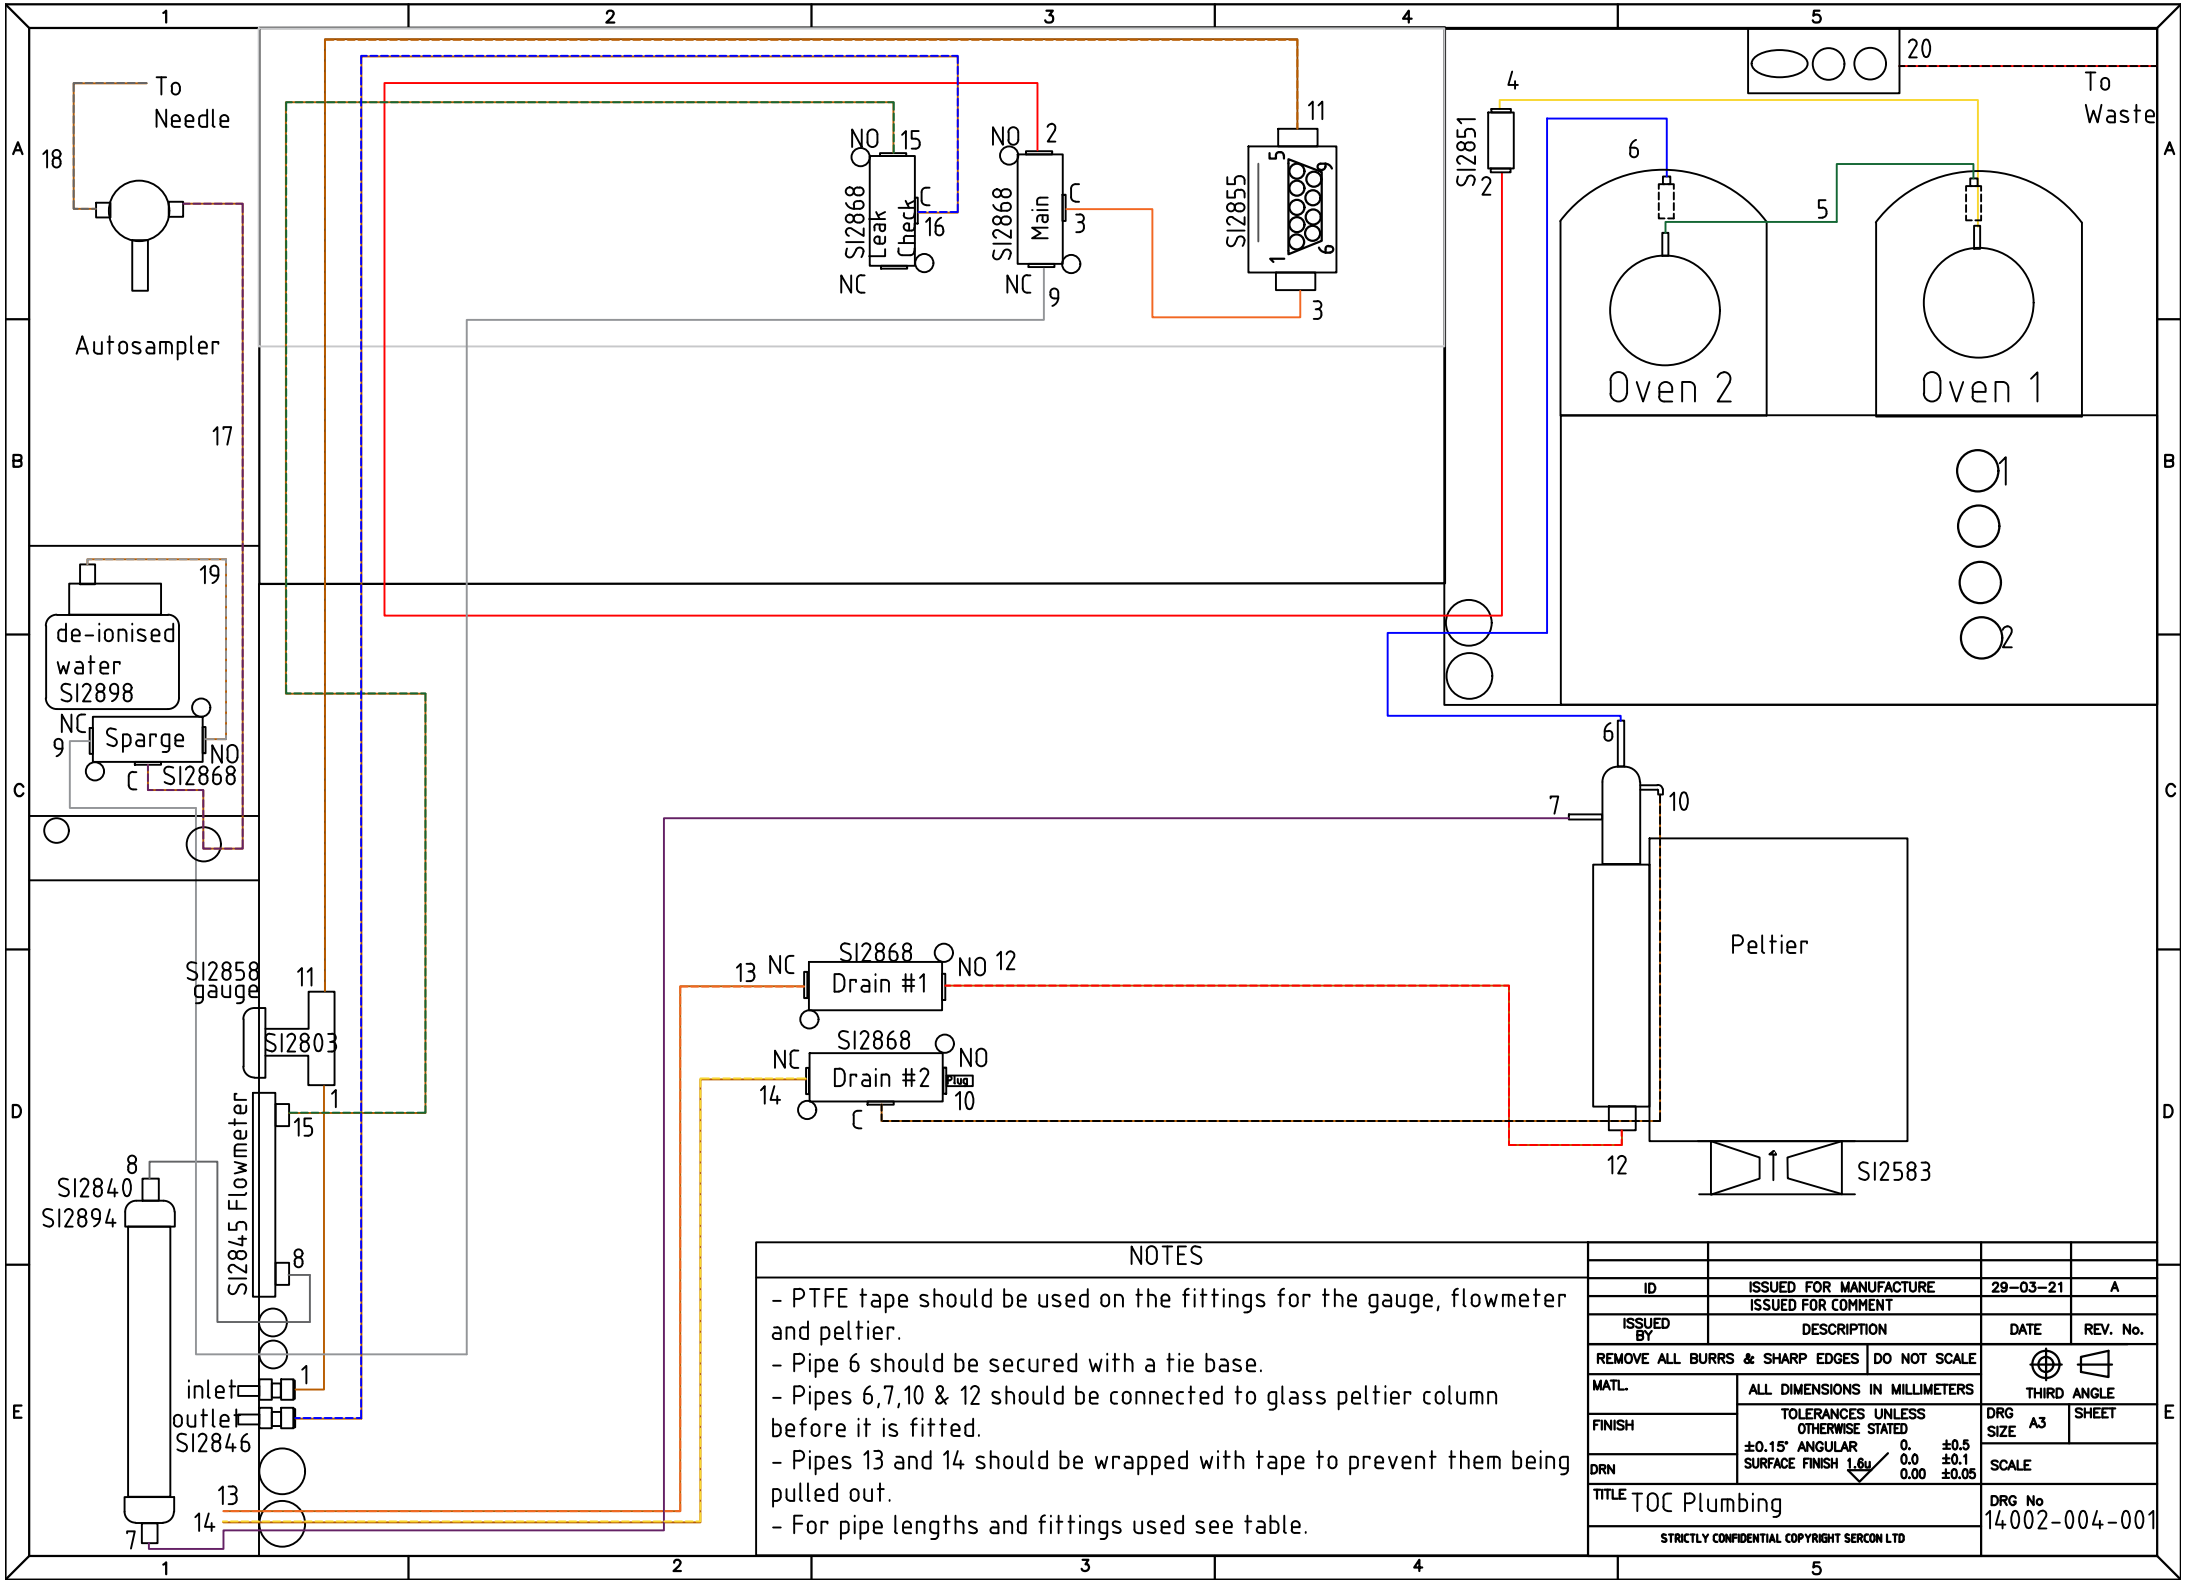



## NOTES

- PTFE tape should be used on the fittings for the gauge, flowmeter and peltier.
- Pipe 6 should be secured with a tie base.
- Pipes 6,7,10 & 12 should be connected to glass peltier column before it is fitted.
- Pipes 13 and 14 should be wrapped with tape to prevent them being pulled out.
- For pipe lengths and fittings used see table.

| ID | DESCRIPTION | DATE | REV. No. |
|---|---|---|---|
| | ISSUED FOR MANUFACTURE | 29-03-21 | A |
| | ISSUED FOR COMMENT | | |

ISSUED BY

REMOVE ALL BURRS & SHARP EDGES | DO NOT SCALE

THIRD ANGLE

MATL.

ALL DIMENSIONS IN MILLIMETERS

FINISH

TOLERANCES UNLESS OTHERWISE STATED
±0.15° ANGULAR
SURFACE FINISH 1.6µ
0. ±0.5
0.0 ±0.1
0.00 ±0.05

DRG SIZE A3 | SHEET

DRN | SCALE

TITLE TOC Plumbing

DRG No 14002-004-001

STRICTLY CONFIDENTIAL COPYRIGHT SERCON LTD